


KitchenAid®

COOKTOP PARTS

For Model: KERH507YWH1, KERH507YAL1, KERH507YBL1

30" ELECTRONIC RANGE
FREESTANDING
DESIGNER STYLE
Self-Clean Oven

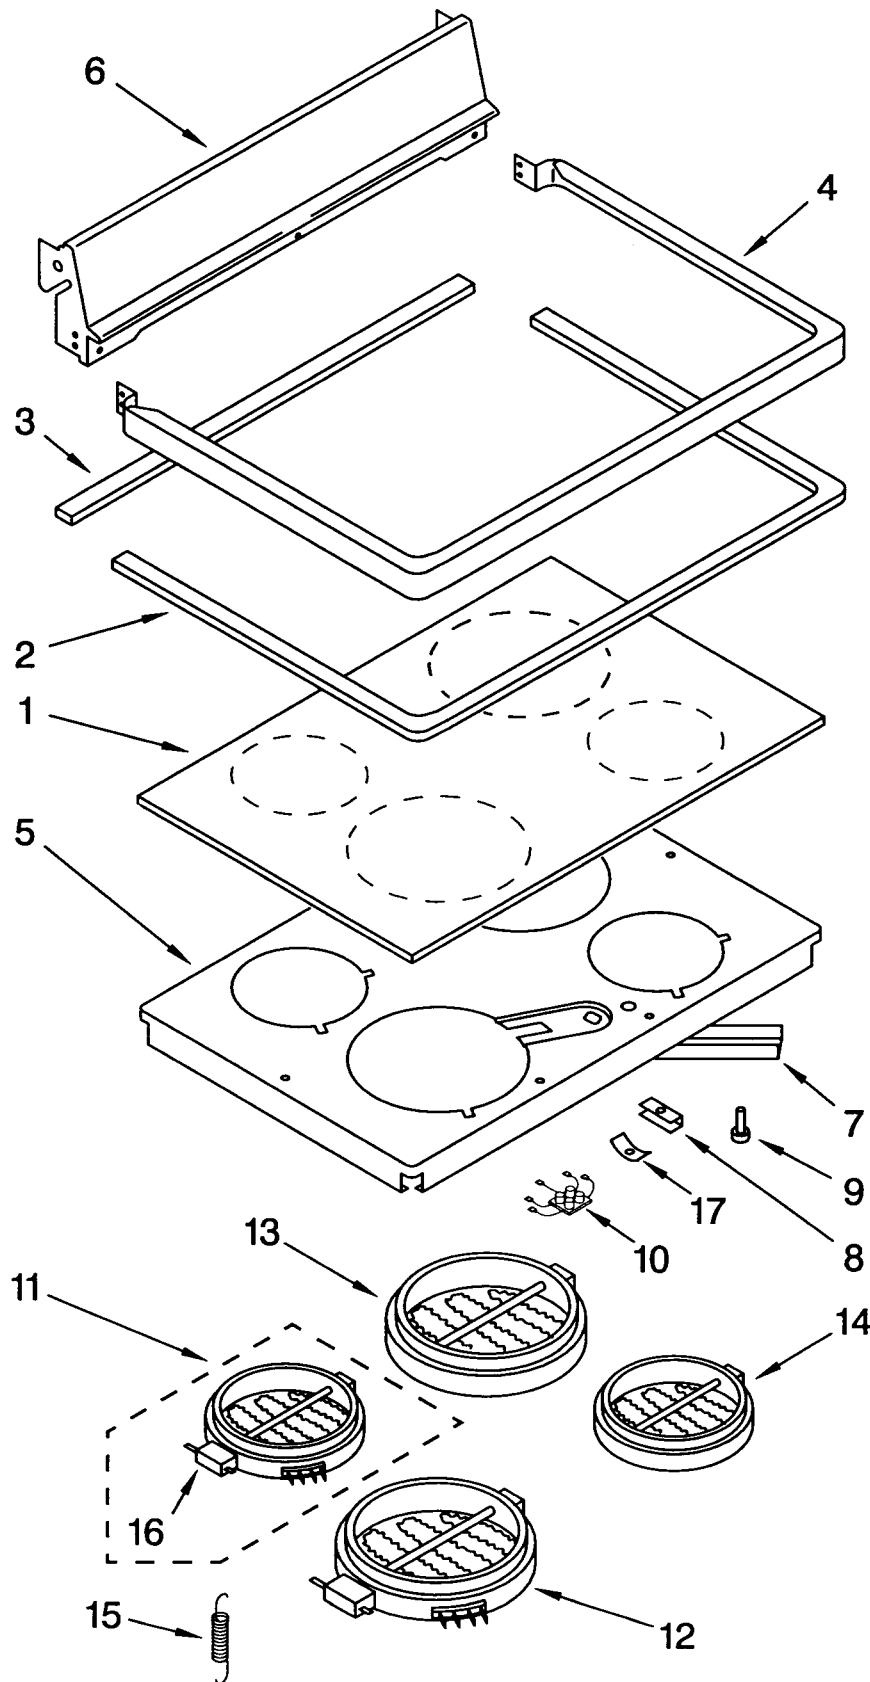

11/94

NOTE: The screws and nuts required to attach a part are listed immediately following that part.


1		Cooktop, Ceran
	9780317	White
	9780337	Almond
	9750926	Black
2	9750923	Gasket, Cooktop Front & Sides
3	9780742	Rear Gasket
4		Frame, Cooktop
	4211918	White
	4211919	Almond
	4211920	Black
	3149333	Screw, (4) 10 x 1/2
5	9750455	Support, Element
6		Back Splash
	4211921	White
	4211922	Almond
	4211923	Black
	3149333	Screw (4) 10 x 1/2
7	422404	Brace, Support
	9780273	Screw (2) 10 x 3/4"
8	9750821	Support Clips (4)
	4211831	Screw, (4) 10 x 3/4
9	9780771	Bumper-Black (4)
	9750969	Bumper-White (4)
10	9750966	Hot Light Element, Surface
11	9750752	6" L.R.
12	9750755	9" L.F.
13	9750663	8" R.R.
14	9750662	7" R.F.
15	9780679	Spring (8)
16		Limiter, Temp.
	3149129	6" L.R.
	3149124	9" L.F.
	3183975	8" R.R.
	3149130	7" R.F.
17	915720	Anchor, Screw

LITERATURE PARTS

LIT9750520	Instructions, Installation
LIT9780936	Use And Care Guide
LIT3183790	Video, K/A T/C Ovens
LIT3150693	Cookbook, T/C Ovens
LIT9750877	Tech Sheet-K/A
LIT9750876	Wiring Diagram
LIT9780689	Quick Set (oven)
LIT3183987	Guide-Auto Set
LIT9780945	Label, Instruction (Lamp Cover)

CONTROL PANEL PARTS

For Model: KERH507YWH1, KERH507YAL1, KERH507YBL1

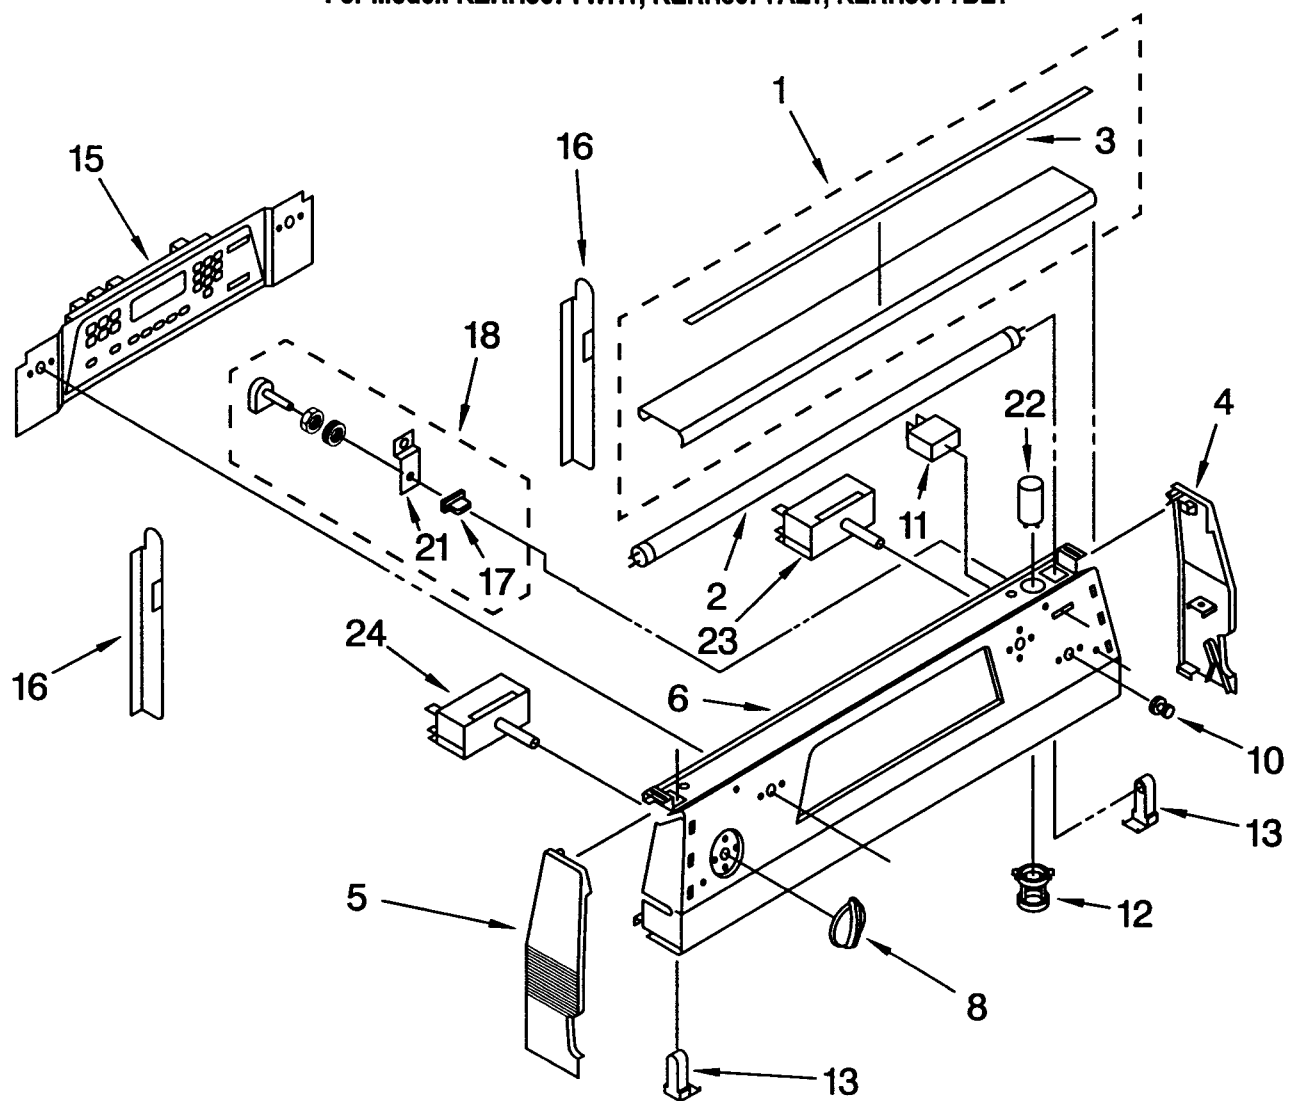


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Lamp Cover
	9780580	White
	9780581	Almond
	9780734	Black
2	422581	Light, Fluorescent
3		Lamp Cover Insert
	9780295	White
	9780332	Almond
	9780731	Black
4		End Cap R.H.
	4211934	White
	4211933	Almond
	4211935	Black
	9780265	Screw, (2) 10 x 3/8
5		End Cap L.H.
	4211937	White
	4211936	Almond
	4211938	Black
	9780265	Screw, (2) 10 x 3/8
6		Panel, Control
	9780293	White
	9780329	Almond
	9780726	Black
	9780852	Screw, (2) 8 x 3/8
8		Knobs, Control
	4211909	White
	4211913	Almond
	4211901	Black
10	9750343	Indicator Lens
11	9750964	Light Module
12	9750866	Starter Holder
13	9750273	Receptacle, Light
15		Oven Control Assembly
	9750700	White
	9750699	Almond
	9750917	Black
16	9780655	Brace, Control Pnl
17		Button, Light
	4212112	White
	4212113	Almond
	4212111	Black
18	9751110	Switch, Light
21	9750721	Bracket, Switch
22	9750377	Starter, Lamp
23	9750639	Infinite Switch 1700W, LR-RF
24	9750641	2400W, LF-RR
	9780268	Screw (8) 8-32 x 3/16

DOOR AND DRAWER PARTS

For Model: KERH507YWH1, KERH507YAL1, KERH507YBL1

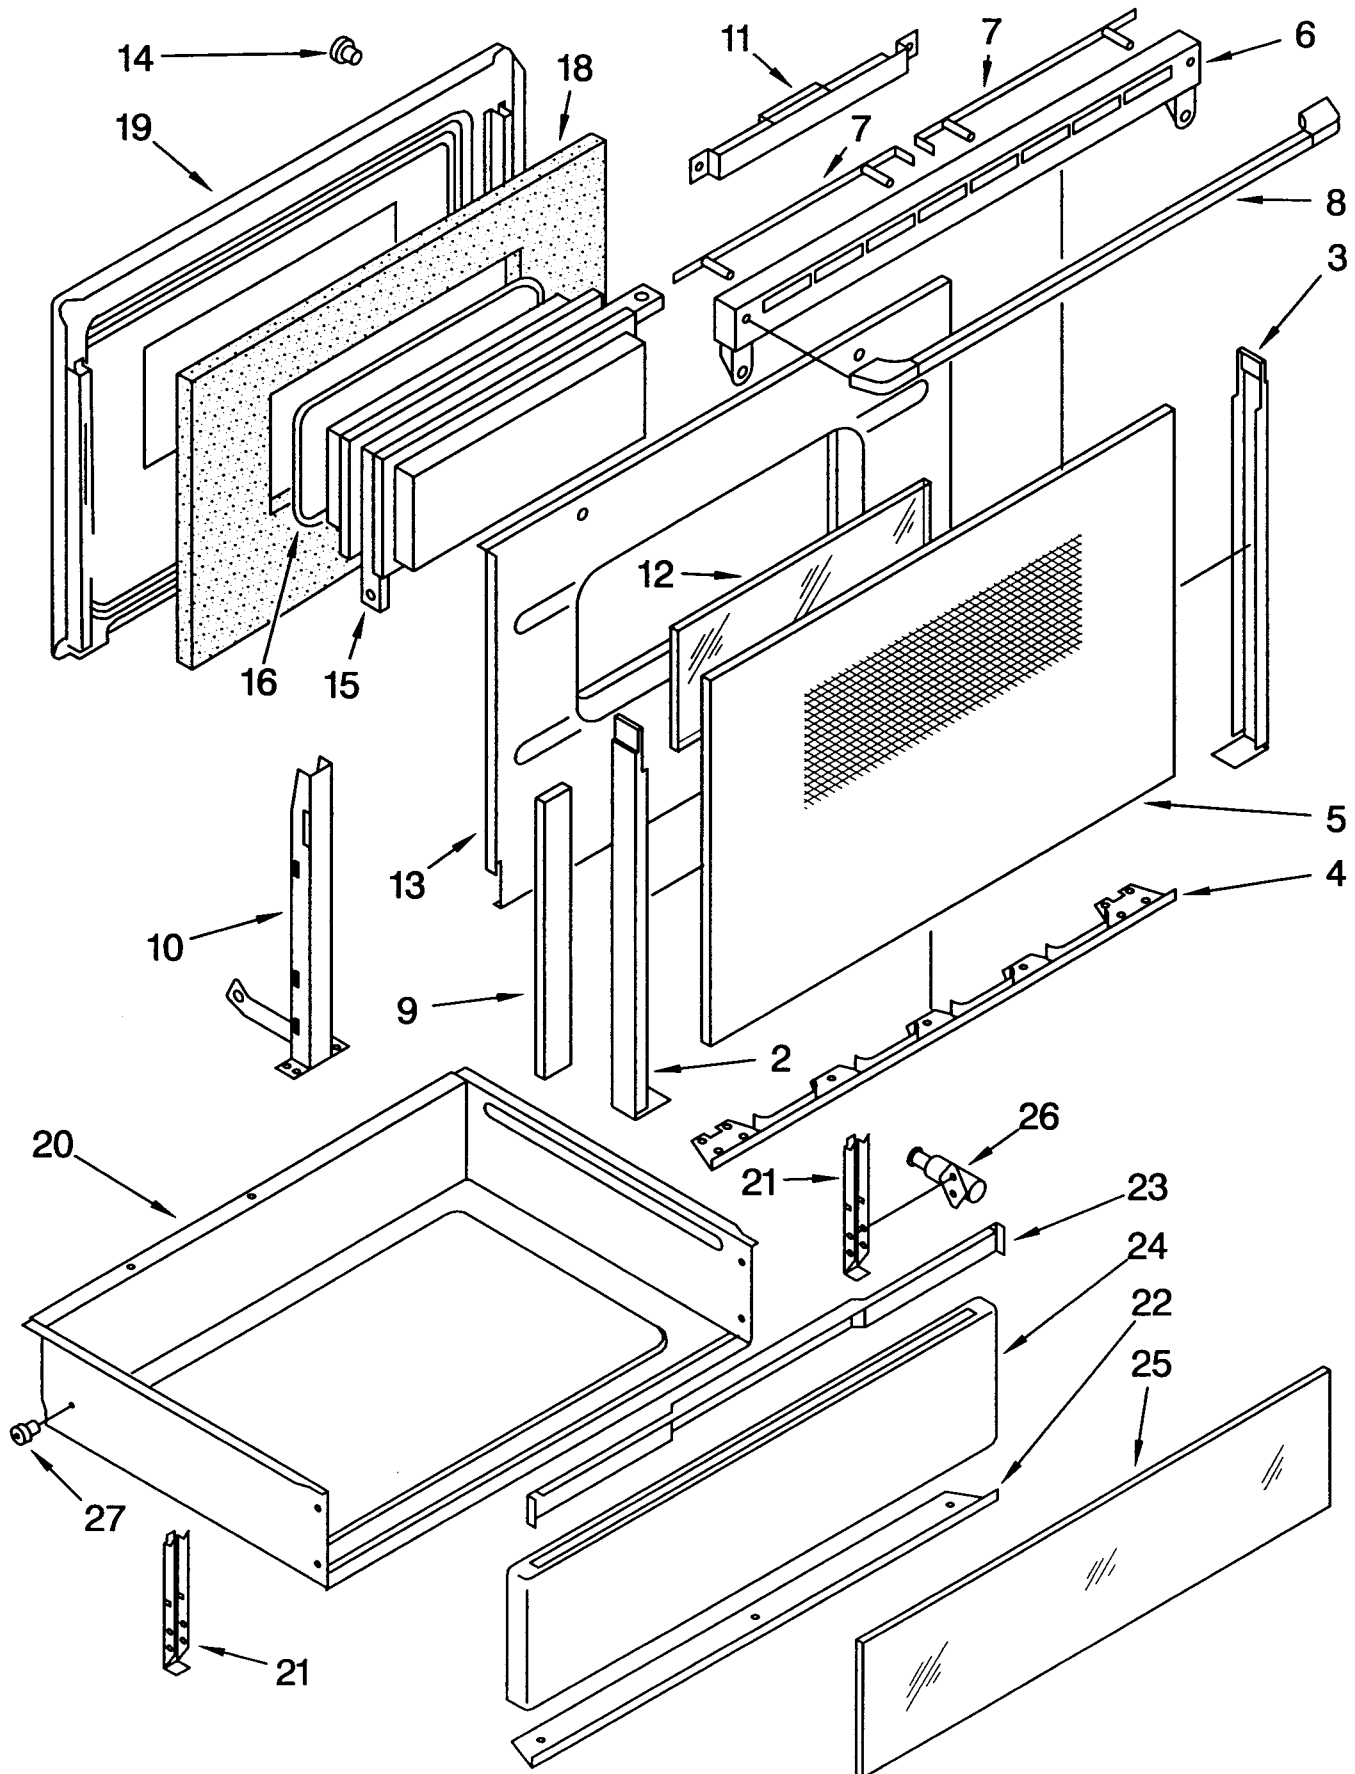


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

2		Trim, Door-Left
	4211912	White
	4211914	Almond
	4211899	Black
3		Trim, Door-Right
	4211910	White
	4211911	Almond
	4211900	Black
4		Trim, Door Bottom
	4211925	White
	4211926	Almond
	4211924	Black
	9780265	Screw, 10 x 3/8
5		Glass, Door
	9780314	White
	9780328	Almond
	9750850	Black
6		Vent, Door
	4211907	White
	4211908	Almond
	4211898	Black
	3149333	Screw (2) 10AB x 1/2
7		Vent Back
8		Handle, Door
	9750705	White
	9750706	Almond
	9750704	Black
	9781072	Screw (2) 10 x 1/2 (2)
9		Gasket, Door Glass
10		Hinge, Door R or L
	9780265	Screw (4) 10 x 3/8
11		Heat Channel
	9780265	Screw (2)
	3148223	10 x 3/8
12		Baffle, Glass
13		Shield Door
14		Bumper, Rubber
15		Window Pack Assy.
16		Seal, Window
17		Inner Glass, Boro
	9780271	Screw (2) 8 x 1/4
18		Insulation
19		Liner, Door
20		Drawer & Roller
21		Bracket, Drawer
	9780272	Screw (4) 10 x 1/2
22		Trim,Drawer Bottm.
	4211905	White
	4211906	Almond
	4211902	Black
	9780265	Screw, (3) 10 x 3/8

23		Trim, Drawer Top
	4211931	White
	4211932	Almond
	4211930	Black
	9780265	Screw, (2) 10 x 3/8
24		Front, Drawer
	4211916	White
	4211917	Almond
	4211915	Black
25		Glass, Drawer Face
	9750612	White
	9780326	Almond
	9750611	Black
26	9750775	Latch, Drawer
	9780806	Screw 4AB x 3/8
27	814229	Roller, Support

OVEN CHASSIS PARTS

For Model: KERH507YWH1, KERH507YAL1, KERH507YBL1

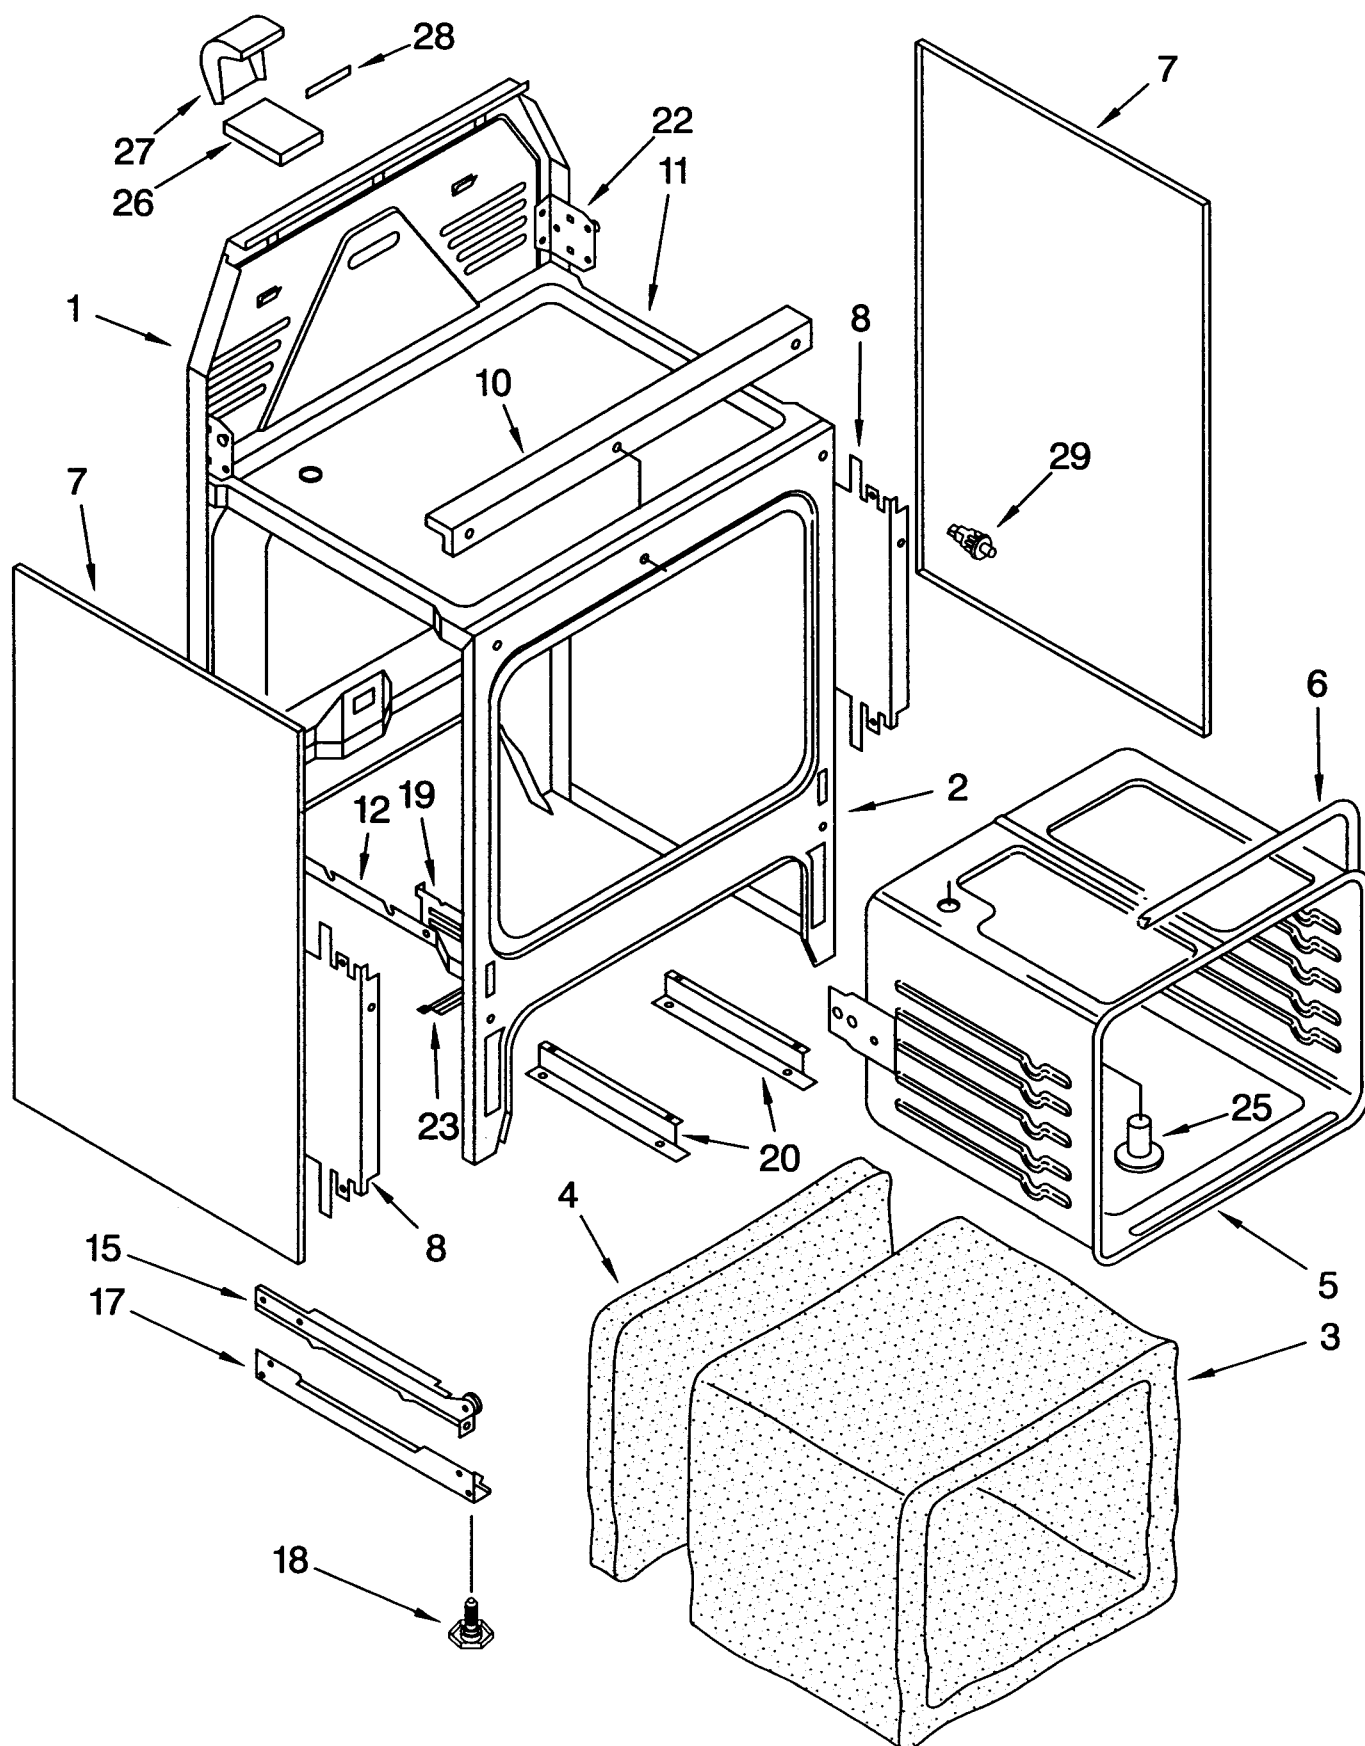

NOTE: The screws and nuts required to attach a part are listed immediately following that part.


1	9750146	Main Chassis, Back
2	4211893	Chassis, Front
3	9750222	Insulation, Wrap
4	9750221	Insulation, Rear
5	4211892	Oven Liner
6	9750247	Gasket Oven
7		Oven , Side L or R
	4211896	White
	4211897	Almond
	4211895	Black
	9780265	Screw (4) 10 x 3/8
8	9780664	Shield, Insulation
	9780265	Screw (2)
10	9780585	Wire Guard
	9780270	Screw, (2) 8 x 3/8
11	9750478	Burner Box
	9780265	Screw (7) 10 x 3/8
	9780275	Screw, (2) 8 x 3/8
12	9750142	Oven Bottom
	9780265	Screw (9) 10 x 3/8
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
	9780270	Screw (2) 8 x 3/8
17	9750147	Bottom Rail (2)
	9780265	Screw, (8) 10 x 3/8
18	312701	Foot, (4)
19	9750149	Hinge, Door L or R
	9780265	Screw, (2) 10 x 3/8
	9780270	Screw, (2) 8 x 3/8
20	421771	Support Rail, Pan
	9780265	Screw, (2) 10 x 3/8
22	9750258	Hinge, Cktp.-Left
	9750416	Hinge, Cktp.-Right
	9780265	Screw, (4) 10 x 3/8
23	9750491	Brckt., Power Cord
	9780265	Screw, (2) 10 x 3/8
25	9750736	Vent Tube
26	9750393	Cover, Vent
27	9750394	Back, Vent
	9780265	Screw, (1) 10 x 3/8
28	9750767	Vent Gasket
29	9750897	Door Switch

Following Parts Not Illustrated

814167	Anti-Tip Kit
3184477	Glass Cleaner

OVEN PARTS

For Model: KERH507YWH1, KERH507YAL1, KERH507YBL1

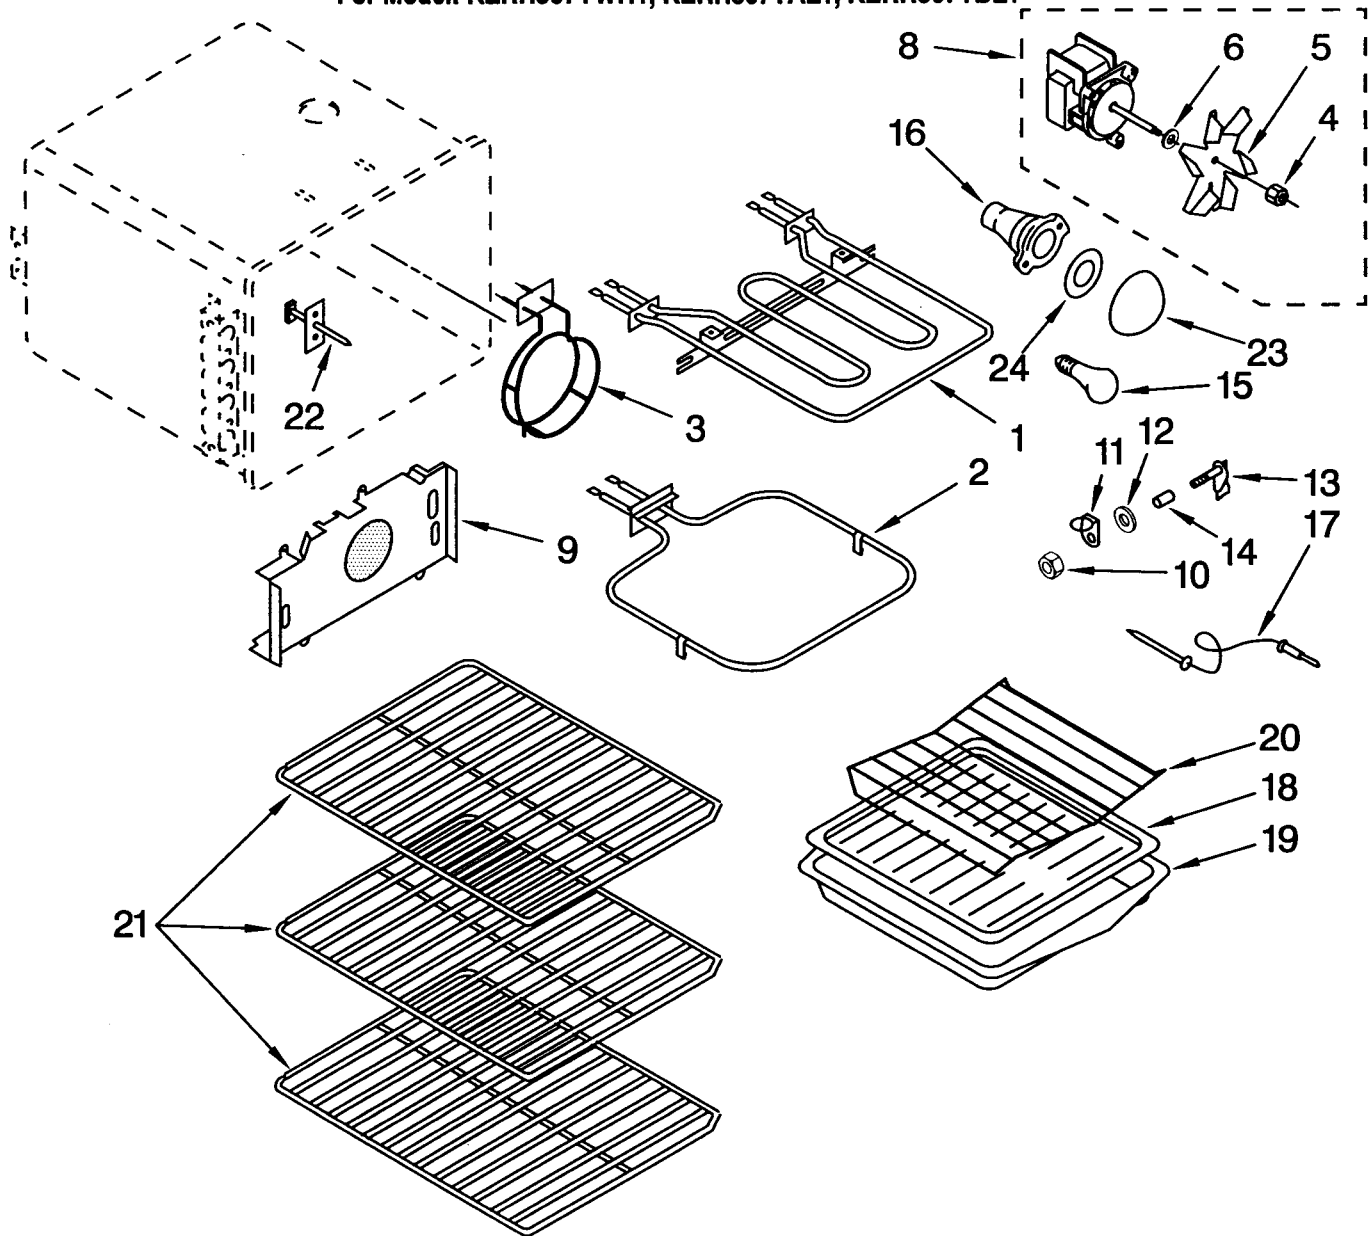


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	9750967	Element, Broil
2	9750213	Element, Bake
3	4211946	Element, Convection
	9780269	Screw, Elements 8-32 x 3/8
4	4173237	Nut
5	9751117	Fan
6	4173238	Shim Ring
8	9751118	Assembly, Fan
	9781073	Screw, 10 x 1/2
9	4211894	Baffle, Convection
	9780270	Screw, (2) 8 x 3/8
10	4167277	Lock-Nut, Cvr.Jack
11	4167266	Jack Cover
12	4163975	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
15	4211947	Bulb, Oven
16	9781050	Light, Socket
17	3150144	Probe
18	3147563	Grill, Broiler
19	4211944	Pan, Broiler
20	3181534	Rack, Roasting
21	9750823	Rack, Standard
22	3148440	Sensor
	9780269	Screw, (1) 8-32 x 3/8
23	9781049	Len's, Light
24	3184533	Gasket, Len's

WIRING HARNESS PARTS


For Model: KERH507YWH1, KERH507YAL1, KERH507YBL1

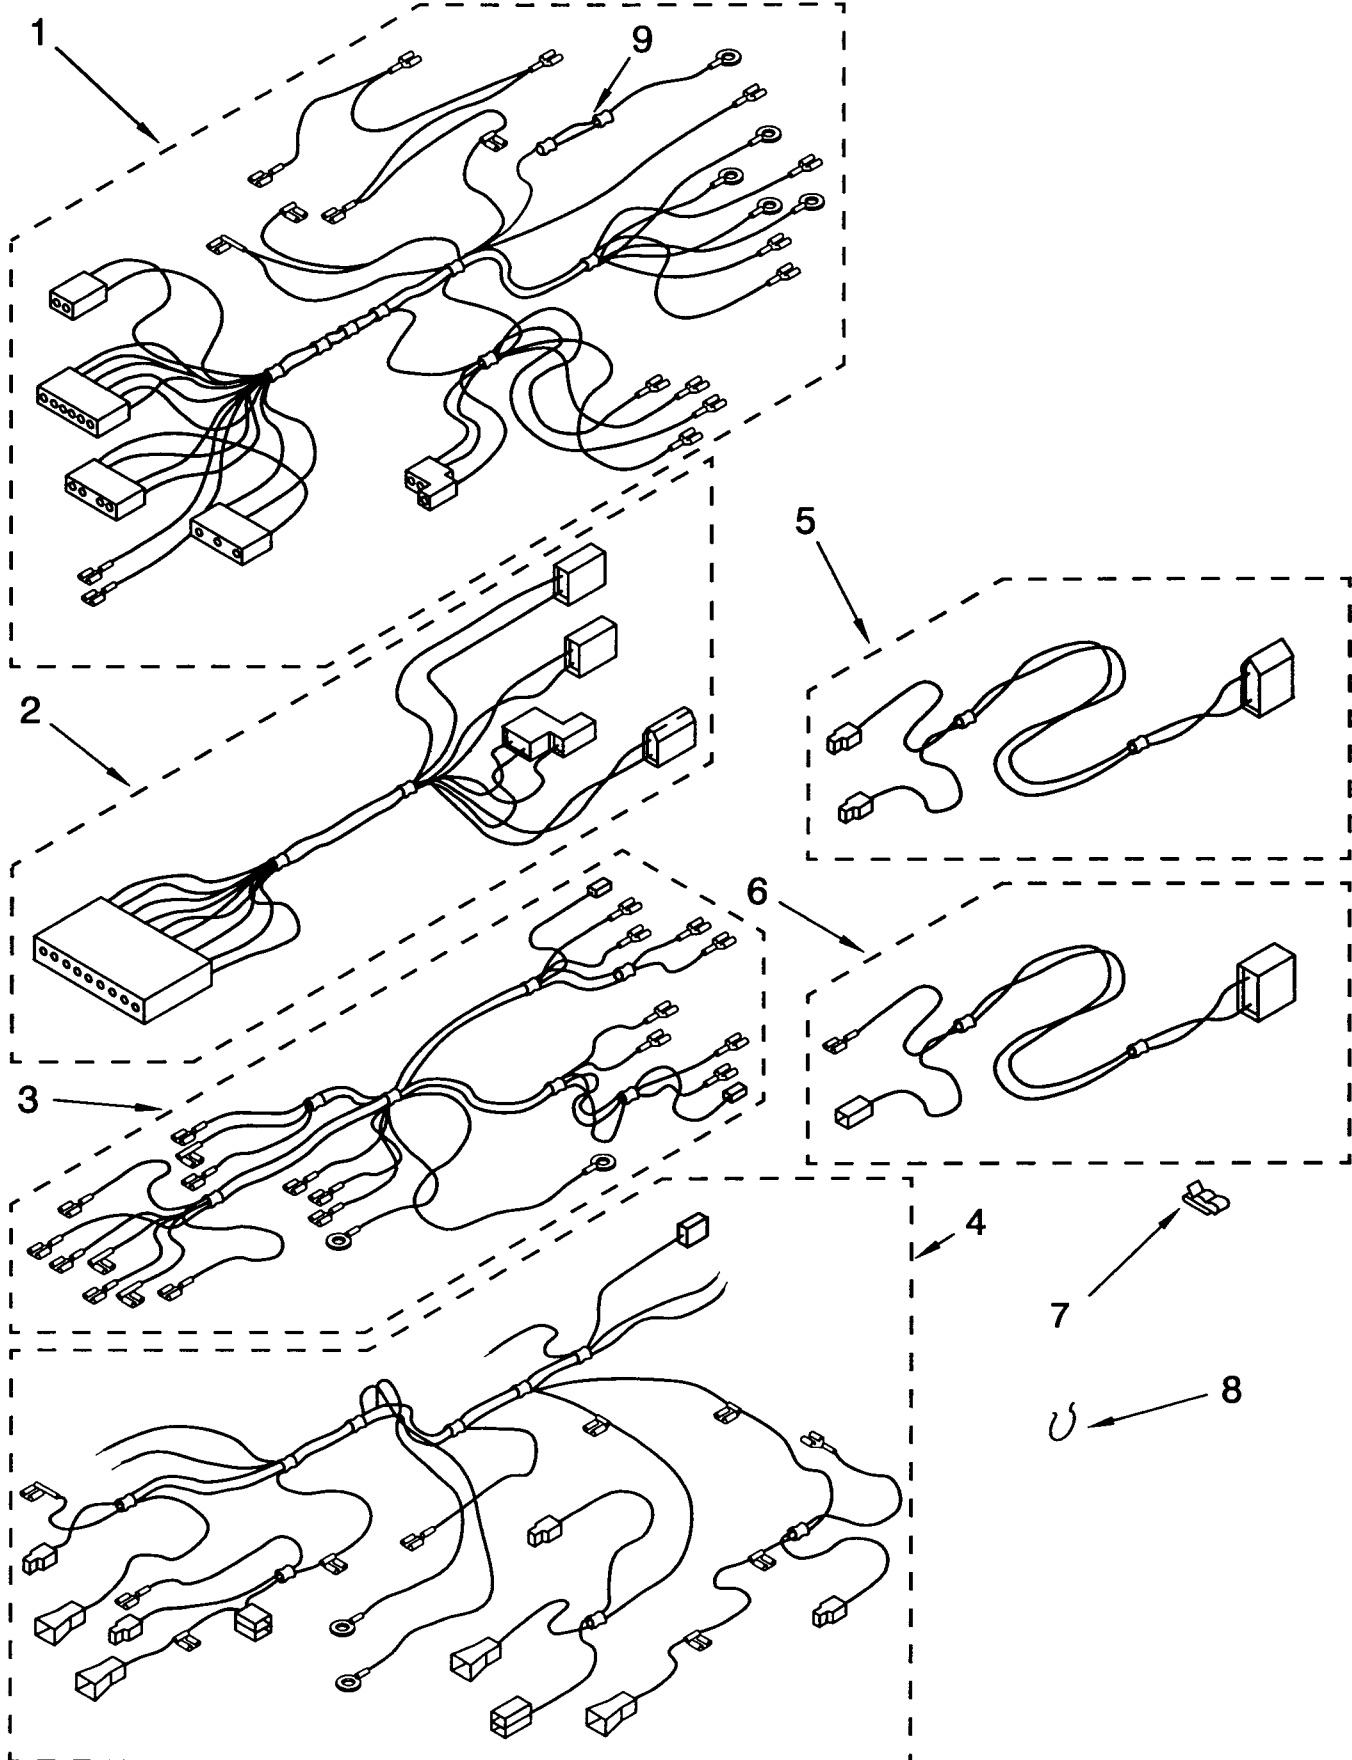

1	9751151	Harness, (Oven-Fused)
2	9780316	Harness, (Lock Switch)
3	9750454	Harness, (Cooktop)
4	9751148	Harness, (Control)
5	9750376	Harness, (Door)
6	9751139	Harness, (Probe)
7	422667	Harness Clip
8	9750984	Hanger, Cable
9	9751369	Harness, Lead (Fused)

REAR CHASSIS PARTS

For Model: KERH507YWH1, KERH507YAL1, KERH507YBL1

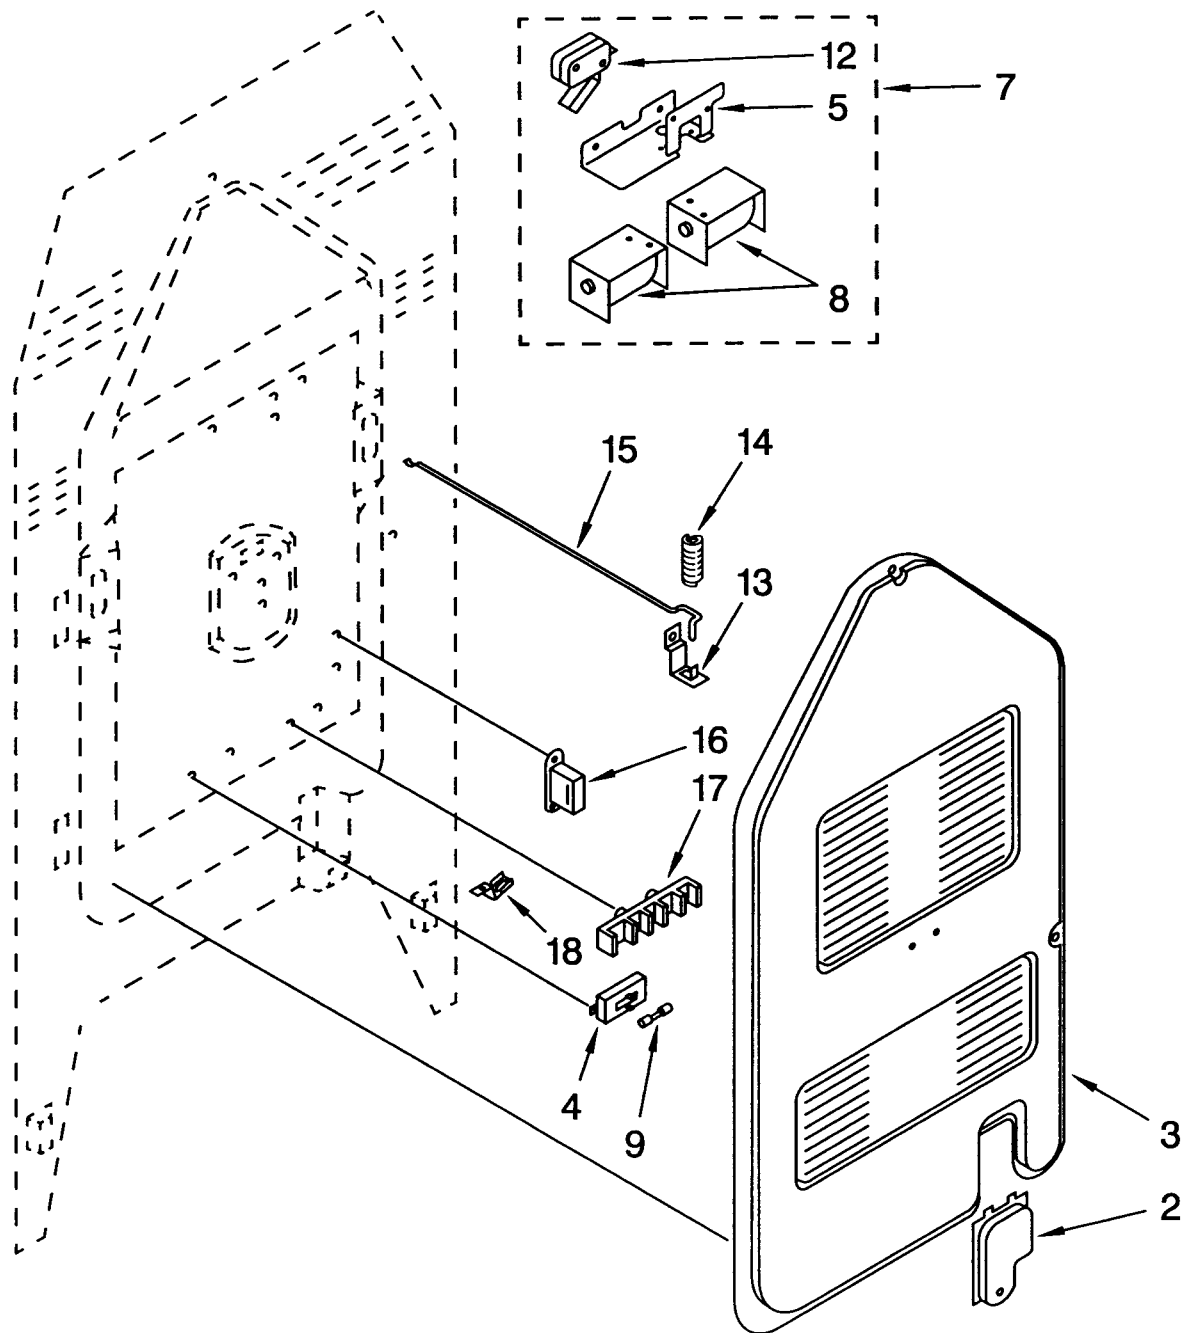

2	9750490	Rear Access Cover
	9780265	Screw, (1) 10 x 3/8
3	9750245	Rear Panel
	4211813	Screw, (2) 10 x 3/8
4	9750941	Fuse Holder
	9750904	Screw (1) **NOTE
5	9750526	Bracket, Lock
	9780265	Screw (2) 10 x 3/8
7	9750522	Oven Lock Assembly
	9780265	Screw (2) 10 x 3/8
8	9750524	Solenoid
	4211945	Screw, (2) 10-32 x 5/16
	4211875	Washer
9	9750940	Fuse, 20-Amp **NOTE
12	9750965	Switch, Interloc
	9750887	Screw, (2)
	9750888	Nut (2)
13	9750834	Bracket, Spring
14	9750833	Spring, Door Lock
	9780265	Screw (1), 10 x 3/8
15	9750523	Rod, Lock
16	9780881	Ballast, Lamp
	9780265	Screw (2) 10 x 3/8
	4211875	Washer
17	258076	Terminal Block
	112432	Nut, T-Block (4)
	4319494	Nut, Brass (3) (Power Cord)
	98884	Screw, (2) 10-16 x 1
18	308498	Ground Strap
	313660	Clip, (1)
	4319494	Screw, Grounding

**NOTE: If your model differ's see wire harness page

OPTIONAL PARTS NOT INCLUDED

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black 12 Ga. 150~c
242820	Wire, Black 14 Ga. 150~c
242821	Wire, Blue 14 Ga. 150~c
242822	Wire, Brown 14 Ga. 150~c
242830	Wire, Brown 14 Ga. 200~c
242823	Wire, Green 14 Ga. 150~c
242824	Wire, Orange 14 Ga. 150~c
242829	Wire, Red 12 Ga. 150~c
242825	Wire, Red 14 Ga. 150~c
242831	Wire, Red 14 Ga. 200~c
242826	Wire, White 14 Ga. 150~c
242827	Wire, Yellow 14 Ga. 150~c
242832	Wire, Yellow 14 Ga. 200~c

PAINT, TOUCH UP (1/2 oz.)

72017	White
72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
72112	Toast
72113	Platinum
511873	**White Porcelain (2 Oz.)

PAINT PRESSURIZED SPRAY (13 oz.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285365	Toast
285366	Platinum
285006	Superior Black
206922	Primer (White)
206925	Leveler (Thinner) (2 Oz.)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
261891	Harvest Gold (Uncut)
285367	Toast (Uncut)
285368	Platinum (Uncut)

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean (1/2 Pt.)
261582	Grease
814009	Glass Cleaner

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
241430	Foil, Aluminum Oven (18" x 25')

**NOTE: Cooktop surface is porcelain; All other panels are painted surfaces.